


# Overview

Thank you for purchasing the ASP Zapper Tornado Hands-free Stand. This stand is designed specifically for hands-free applications, delivering great flexibility to maximize users' comfort and productivity. This sheet provides an easy reference for assembling and installing the stand.

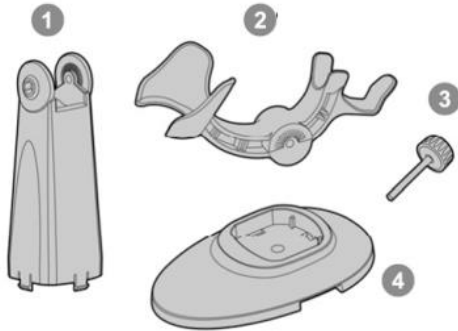


## Package Contents

1. Bracket
2. Scanner Holder
3. Angle Adjustment Knob
4. Base

# Assemble the Stand

## Step 1

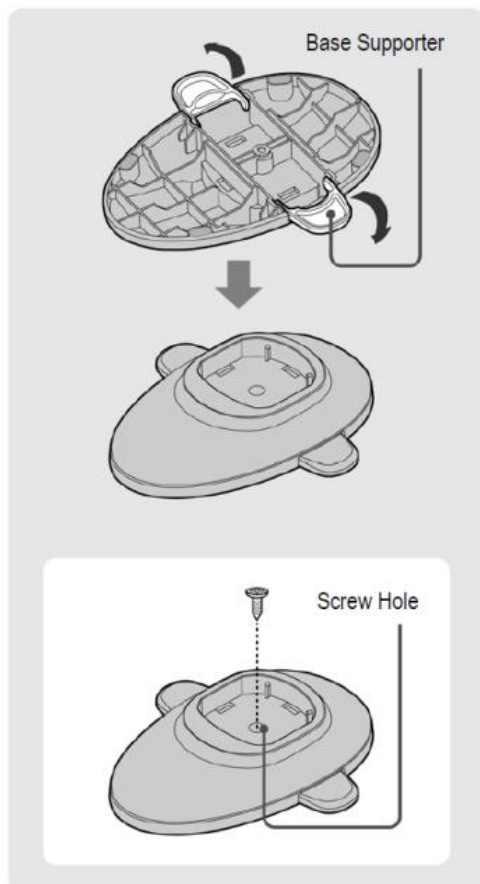


1. Turn the base of the stand upside down and open the base supporters.
2. Turn the base right side up again and place the base in your desired location.

If you would like to secure the stand to a flat surface, please follow procedure below.


1. Insert an M4 (approx. 8~10mm long) flat head self-tapping screw into the screw hole on the base.
2. Tighten the screw to secure the base to the flat surface.
3. **Please note that the M4 screw is not provided in this package.**

## Step 2

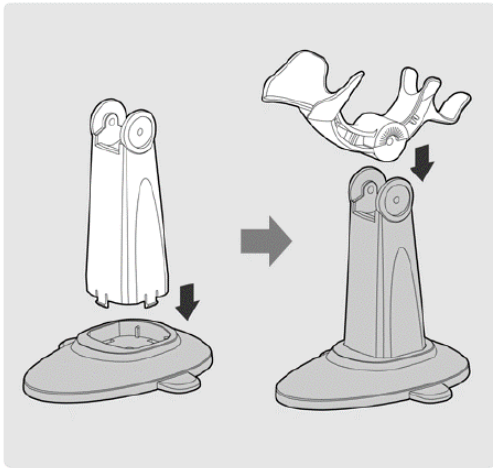


1. Fit the bracket into the base to lock the bracket to the base.
2. Place the scanner holder on the bracket groove properly.

## Step 3

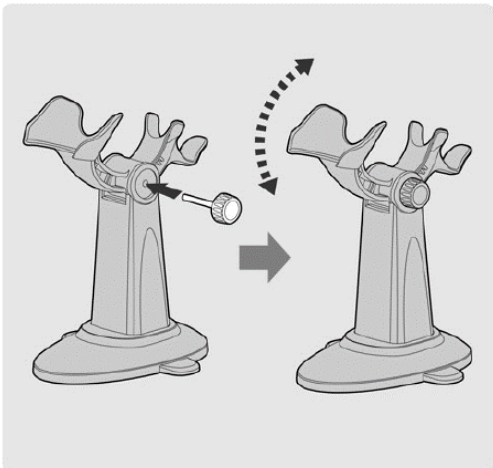

1. Insert the angle adjustment knob. Turn the knob clockwise to secure the scanner holder to the bracket.
2. The stand is now ready to be used with the scanner. You can loosen the knob to adjust the angle.

## Disassemble the Stand

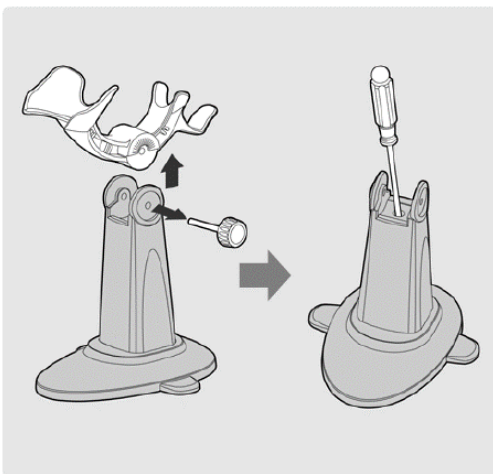

1. Release the knob to remove the scanner holder.
2. Insert a long-bladed screwdriver into the hole at the top of the bracket.
3. Loosen the screw from the base and remove the base from the mounted surface.